



# DIRECTV

## Possible Codes: (For DirecTV branded equipment)

DIRECTV VCR	2253
DIRECTV Satellite	3040 3041 3042 3043 3044 3045 3046 3049 3051 3054 3055 3062 3063 3078 3079 3080 3081 3083 3129 3130 3132 3135
DIRECTV DVR	5000 5002 5004 5007 5008 5010

## Key Functions

*(Some functions may only be available on models with HD or DVR functionality)*

**Menu** - Show DirecTV main menu

**Guide** - Show program guide screen

**Info** - Show Information about current show

**List** - Show Playlist of recorded programs

**Rec** - Record the current show or guide item

**Exit** - Exit any menu screen and return to Live TV

**Red, Green, Yellow, Blue** - These buttons function as shortcuts. The colored buttons act the same with Blu-Link™ as they do on the DirecTV remote. Look for short cuts on menus and on the guide.

**Replay** - Skip back 6 seconds

**Skip** - Skip forward 30 seconds

**Aspect** - Change which HD format is displayed