



# Dish Network

## Possible Codes: (For Dish / Echostar branded equipment)

3034 3035 3036 3037 3047 3131 3133 3138 3139 5009 3159

## Key Functions

*(Some functions may only be available on models with HD or DVR functionality)*

**Menu** - Show Dish main menu

**Guide** - Show program guide screen

**Info** - Show Information about current show

**List** - Show Playlist of recorded programs

**Rec** - Record the current show or guide item

**Exit** - Exit any menu screen and return to Live TV

**Red, Green, Yellow, Blue** - These buttons function as shortcuts. The colored buttons act the same with Blu-Link™ as they do on the DirecTV remote. Look for short cuts on menus and on the guide.

**Replay** - Skip back 6 seconds

**Skip** - Skip forward 30 seconds

**Aspect** - Change which HD format is displayed

